

Cross Arm installation Instructions:

Begin at Fig. 1 (Lower Cross Arm installation)

Installation should begin from the bottom of the post.

Locate Cross Arm onto Post with the Hook Tab of the Cross Arm through and just over the Trap Hole of the Post, and Retainers through the Tee Slots.

Locate Lever Recess onto the top of the Trap hole above the Cross Arm being installed. (About 6 inches above)

Lift the Lever until the bottom of the Pivot Arm can be held against the inside of the Post on top of the Cross Arm with your thumb.

Apply downward pressure on the Lever until the Lock Tab of the Cross Arm snaps into the Trap Hole of the post. (An audible "click" may be heard)

Do not force the Cross Arm past the point where the Cross Arm & Post screw holes line up with each other.

Fig.2 (Top Cross Arm installation)

Set installation tool as shown below for top Cross Arm installation.

Locate Cross Arm onto Post with the Hook Tab of the Cross Arm through and just over the Trap Hole of the Post, and Retainers through the Tee Slots.

Locate Pivot Arm Pin through both Screw Holes of Post and installed Cross Arm immediately below.

Maintain Thumb pressure on Pivot Arm as shown in Fig.2.

Locate bottom of Lever Anvil onto Cross Arm Hook Tab cut out ONLY.

Apply upward pressure on the Lever until the Lock Tab of the Cross Arm snaps into the Trap Hole of the Post. (An audible "click" may be heard)

Do not force the Cross Arm past the point where the Cross Arm & Post Screw holes line up with each other.

